

Installation Instructions: Wall Mount Drapery



Step 1: Lay out the drapery on a flat surface.

Step 2: Measure the length of the drapery: For this example we will use a 68" length drape.

Step 3: Measure up the right and left side of the HVAC (never in the middle) unit as shown in the above picture until you get to the drapery length. Example: Locate 68" from the top of the HVAC.

Step 4: Once you locate your measurement, add 1" and use a pencil to mark the wall. Example: Mark on wall at 69".

Step 5: From the right and left edge of the window, locate the closest stud in the wall. This should be between 1.5" and 2.5". Use a pencil to mark this location.

Step 6: Line up the top left or right edge of the Mounting Bracket with your mark on the wall (See #1 & #2 on *Hardware Diagrams for Wall Mount Drapery*).

Step 7: Bolt the Mounting Bracket into the stud on the wall on either side of the window.

Step 8: Mount the Rod inside of the Mounting Bracket using a flat head screw driver to lock the Rod into position (See #3 on *Hardware Diagrams for Wall Mount Drapery*). Take a step back to ensure the Rod is balanced in the center of the window.

Step 9: Bolt the 1" x 1" L Brackets (Angle Iron) to the wall. This is where the return of the drapery will hook into (See #4 on *Hardware Diagrams for Wall Mount Drapery* for placement).

Step 10: Install the drapery onto the Rod to ensure the last hook is placed inside the 1" x 1" L Bracket.

Step 11: "Break the Pleats" after your drapery is completely installed by pulling the fabric straight out towards you between the two pleats, while holding the fabric with one hand. Take your other hand and make a vertical crease into the fabric. This will allow the drape to fold back and forth correctly while opening or closing the drape.

Installation Instructions: Wall Mount Valance



1) Example of Wall Mount Valance at Ceiling



2) Example of Wall Mount Valance where window to ceiling is more than 18"

Step 1: The top of the large L Bracket should be placed 1" below the ceiling then mounted into the wall. **If the top of the window to the ceiling is greater than 18", take the length of the valance minus 2". This will give you the location where the L brackets should be mounted.***

Step 2: Slide the valance board between the ceiling and L Bracket, making sure the board is centered with the window.

Step 3: Once the valance is centered, screw it to the L Bracket.

Step 4: Lay the valance flat with the face fabric showing up with the Velcro.

Step 5: Fold the Velcro back and start at the 1st pleat on the corner of the board. Attach the Velcro to the board across the front of the board pulling and straightening as you go across. Once you have the front attached, Velcro the return to each side of the valance board.


For video instructions, please visit www.amerifabintl.com/installation.

Hardware Diagrams for Wall Mount Drapery


1. Wall Mounting Bracket



2. Top Edge of Mounting Bracket

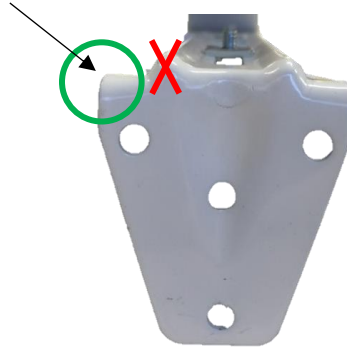

3. Drapery Rod- To lock drapery rod into position insert flat head screw driver and turn to its locked position.

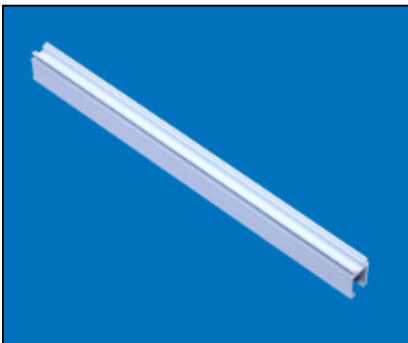

4. 1" x 1" L Bracket- Line up the edge of the 1" x 1" bracket with the center of the hole in the last carrier.

